

CABINET SETUP GUIDE



Innovative Concepts in Entertainment 10123 Main Street Clarence, New York 14031 (716) 759-0360 Service www.icegame.com

Table of Contents


Cabinet Setup	3 - 7
Back Seat Assembly	8 - 12
Diagnostic Menu System	13
Main Menu	14
Options	15
Gun Calibration	
Gun Assembly	16
Warranty	19




With a helper, place the upper main cabinet onto the lower cabinet.


At the front, install one AA6281 Allen and AA6212 washer on each side.

Do not fully tighten at this time.

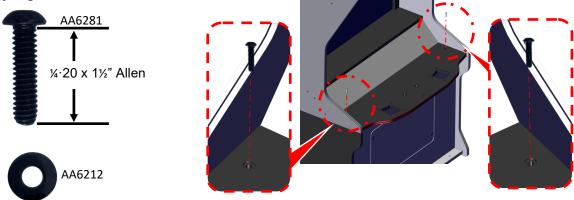

Remove the back panel. There are six AA6220 Allen bolts and AA6212 washers that hold the cabinet back panel on. Put hardware aside.

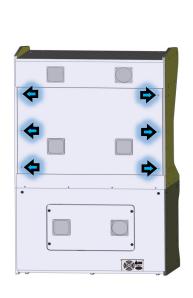

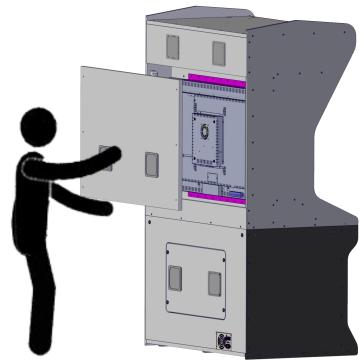

Install one AA6281 Allen bolt and AA6212 washer at each side of the backside of the cabinet. See circle diagrams for locations.


Make sure the alignment of the side panels of the cabinet are straight, then tighten the two at front and two at back mounting bolts.




Locate the DVI and AC Power cord at the bottom of the cabinet. Attach the video DVI cable to VIDEO DVI and the AC power cord to AC IN on the monitor.



Then connect the upper cabinet harness shown below.

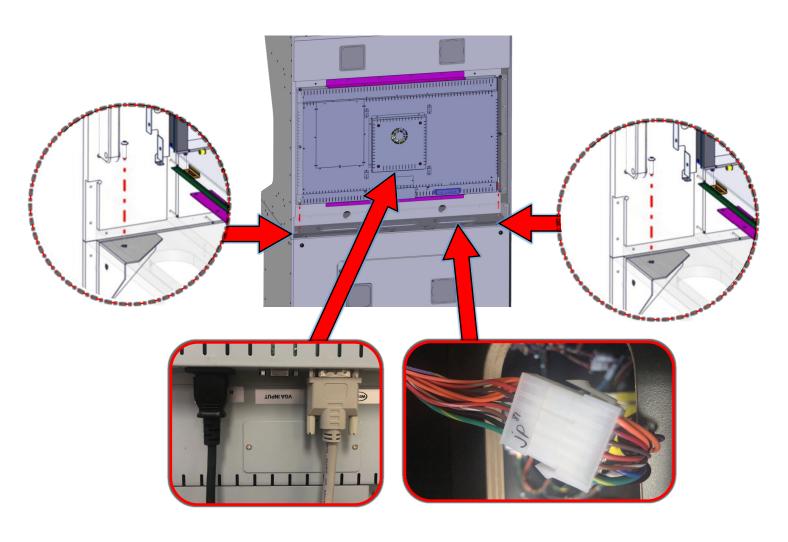


Re-install the back door panel. Use AA6220 bolts and AA6212 washers you removed previously.

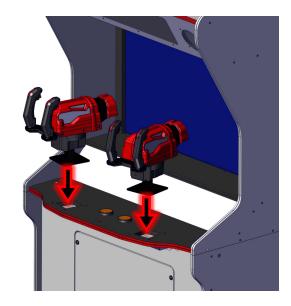



Unpack the two gun assemblies. Insert the gun assembly into the gun mounts on the control panel.




Use PC60622 Allen bolts at the rear and AA6281 Allen bolts with AA6212 washers at the front. Secure the front Allen's with PC60604 nylon nuts.

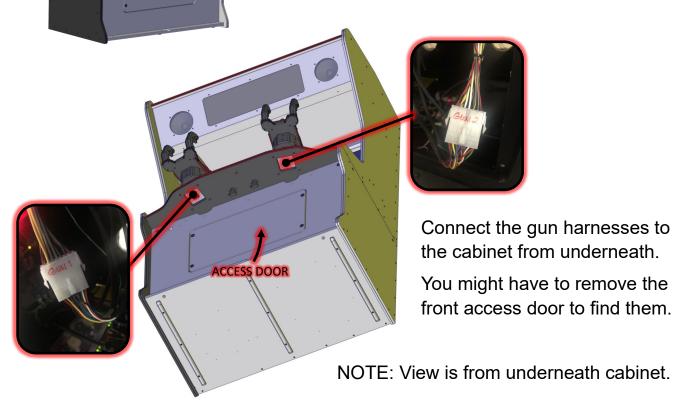

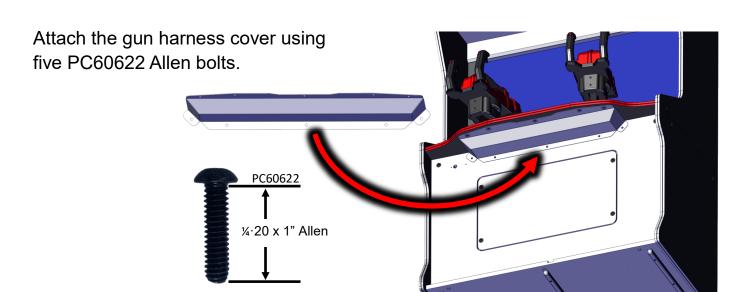


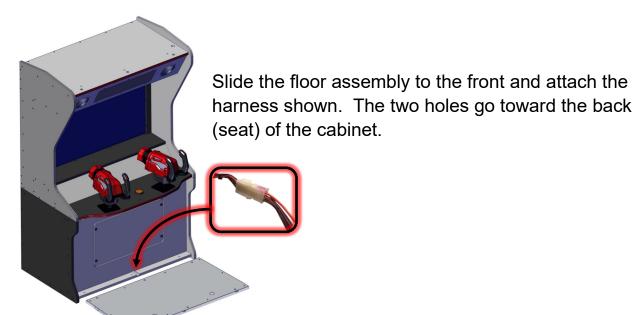


Secure the front half using six AA6220 Allen bolts and six AA6212 washers but do not fully tighten until the back half is installed.

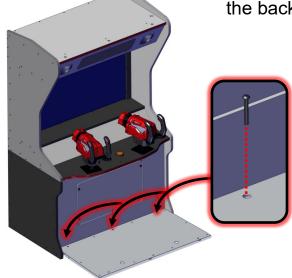




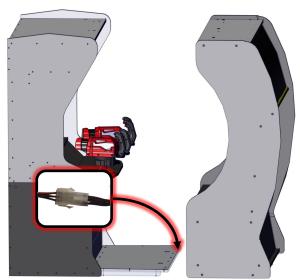


Attach the back harness to the seat assembly.





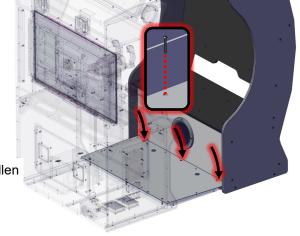


Secure the roof using six AA6220 Allen bolts and six AA6212 washers.

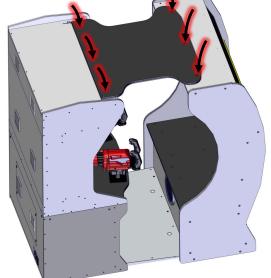





Secure the Dino sign using two AA6211 Allen bolts and two AA6212 washers.

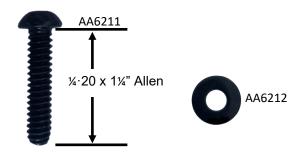





Rear Seat Assembly (If disassembled).

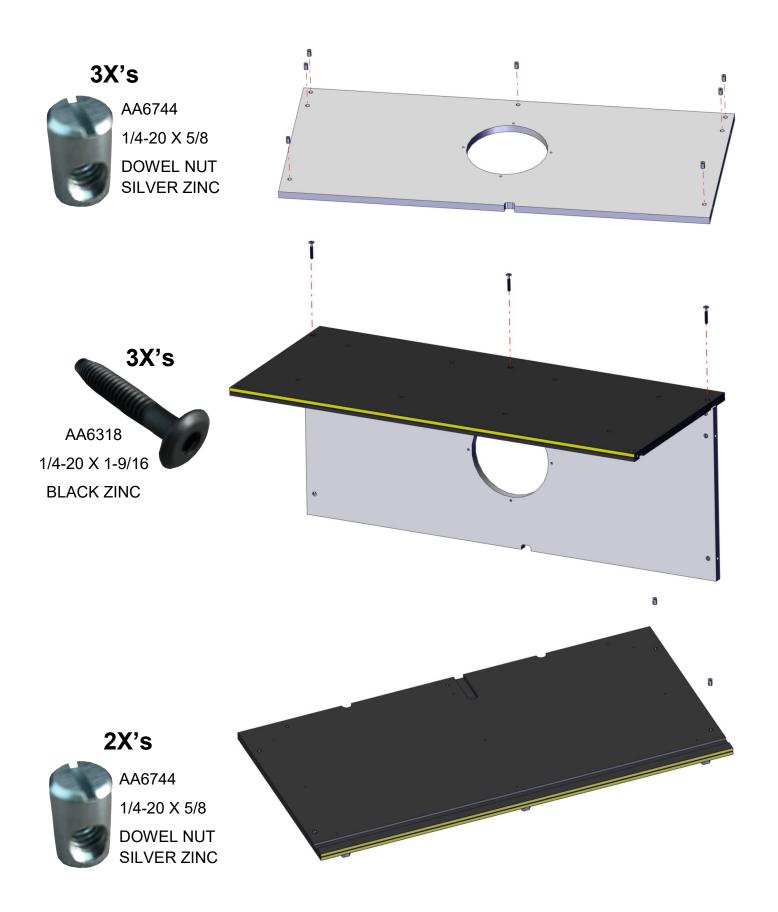


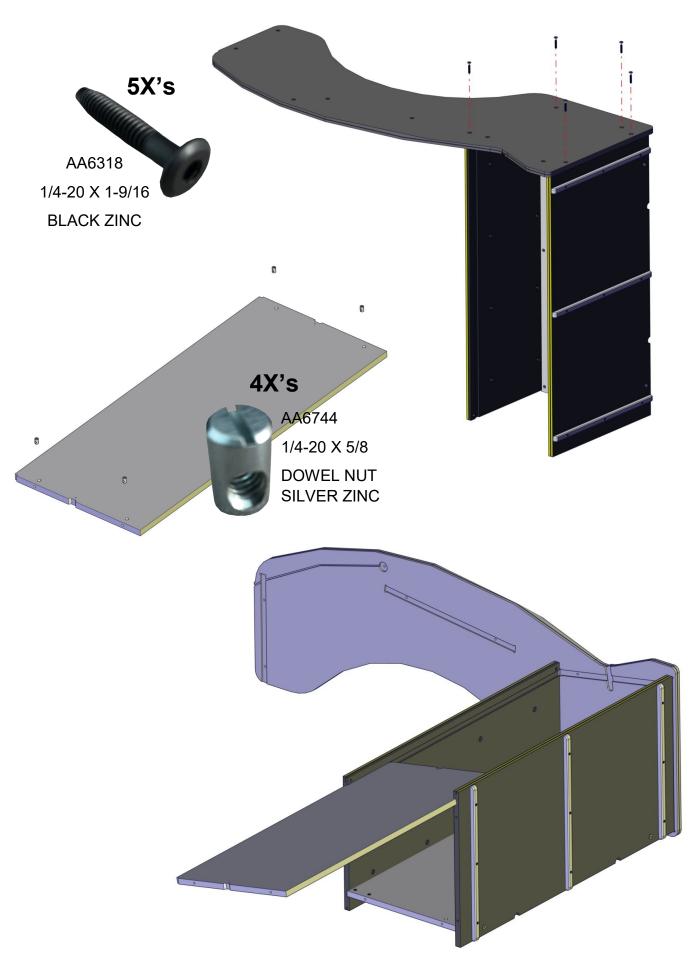


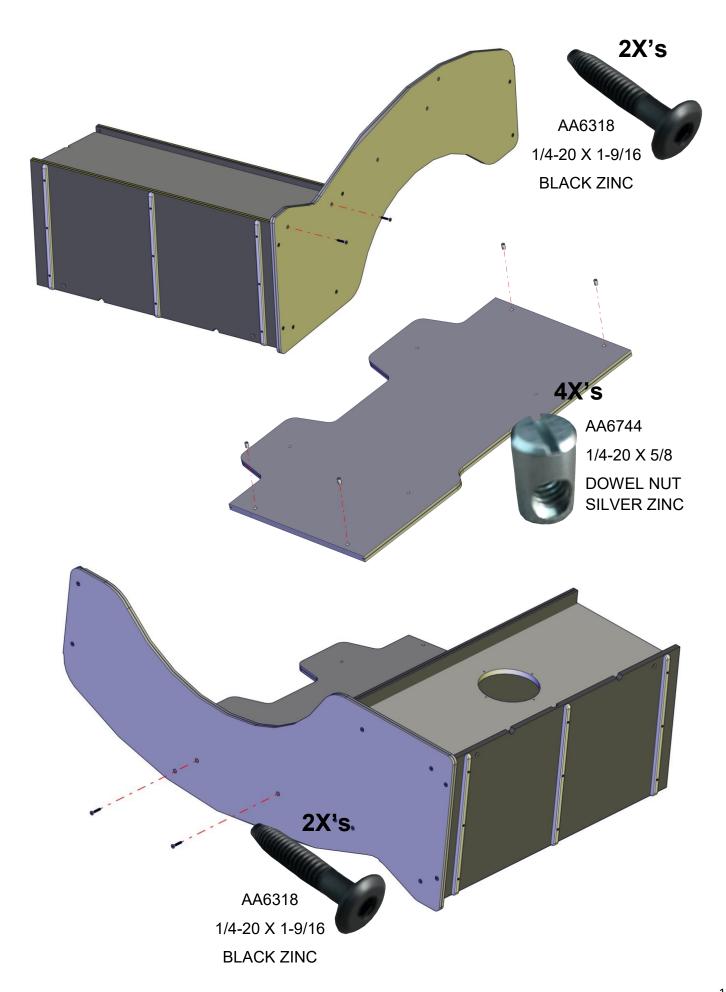

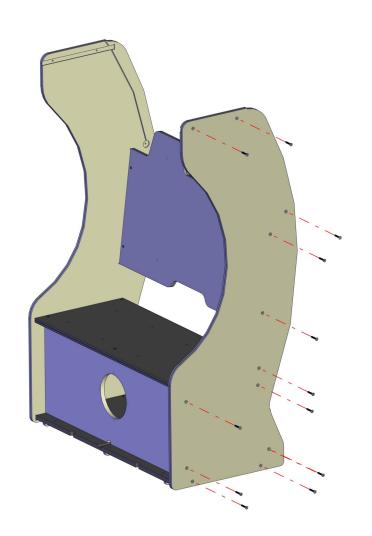




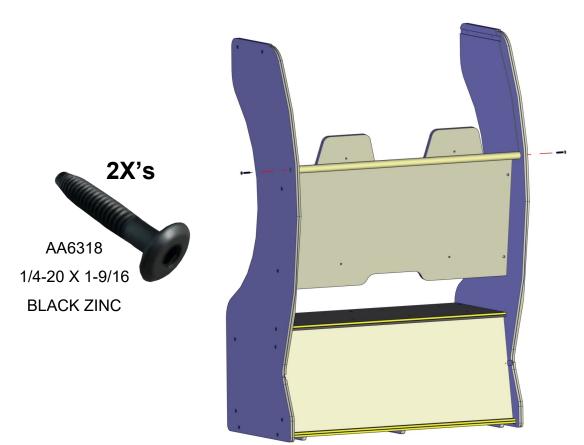


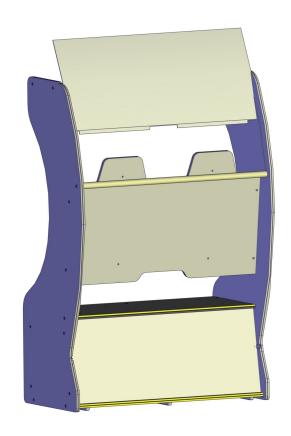


4X's

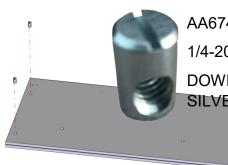

AA6744 1/4-20 X 5/8 DOWEL NUT SILVER ZINC

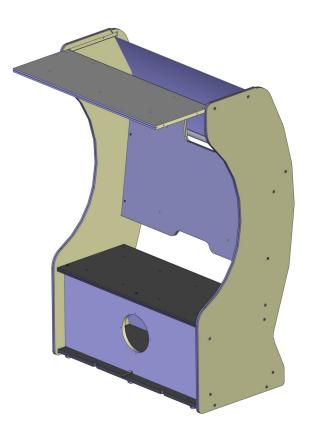

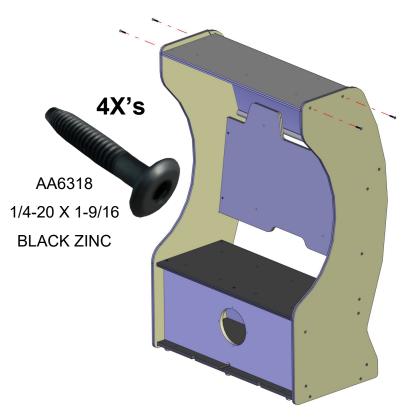




AC Power plug


You will need to plug in the AC power cord once you have the game setup. The AC cord plugs into the power supply located at the rear of the game and at the bottom.


Make sure the AC power switch is set to - and not o.

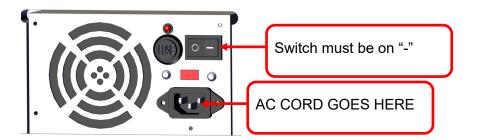

How to Enter Programming

In the attract mode (not in game mode) press and hold the PWR button for 3 seconds to enter the program options.

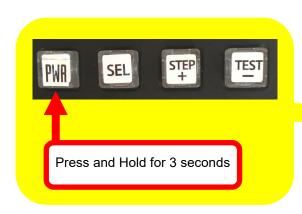

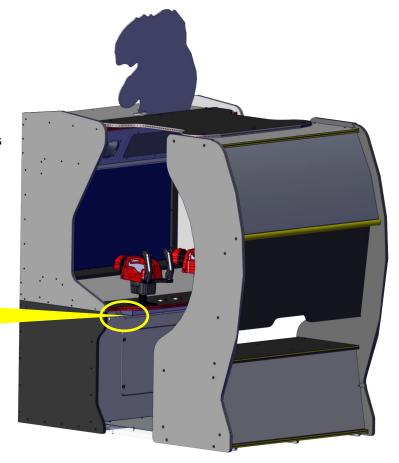

Navigating the menu and changing values

Press the "STEP +" and "TEST -" buttons to scroll through the menus.

Press the "SEL" button to enter the desired menu.

Press the "STEP +" and "TEST -" buttons to change the option selected.

Press the "PWR" button to save any changes.

Menu Screens and Descriptions

Main Menu

• Diagnostics - verify game inputs and outputs are functional

Pricing - view various tracking statistics


Game Adj - setup and manage game parameters

System Adj - setup and manage system parameters

Audits - view various hardware and software information ie. collection and play data

• Gun Cal - calibrate and verify gun functionality

Game Vol - adjust game and attract volume

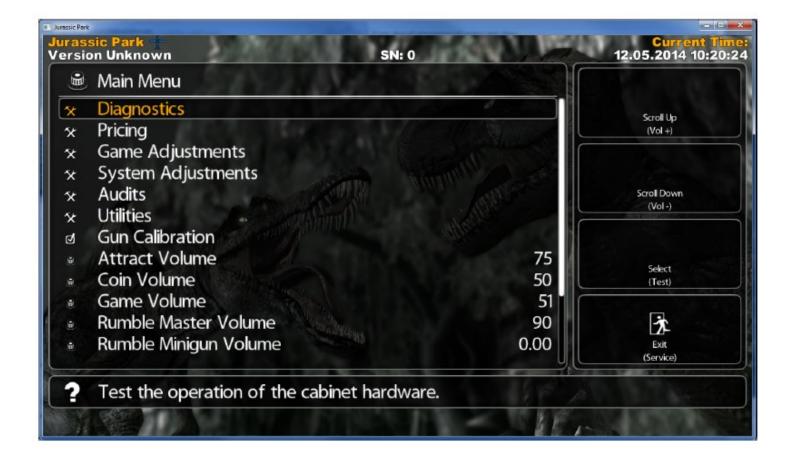

Main Menu

Game Adjustments

Adjust in-game parameters. Customize in-game features to suit customer base and location.





Main Menu


Gun Calibration

Maximize your games earning potential by making sure that the guns are periodically calibrated and all switch inputs are functional.



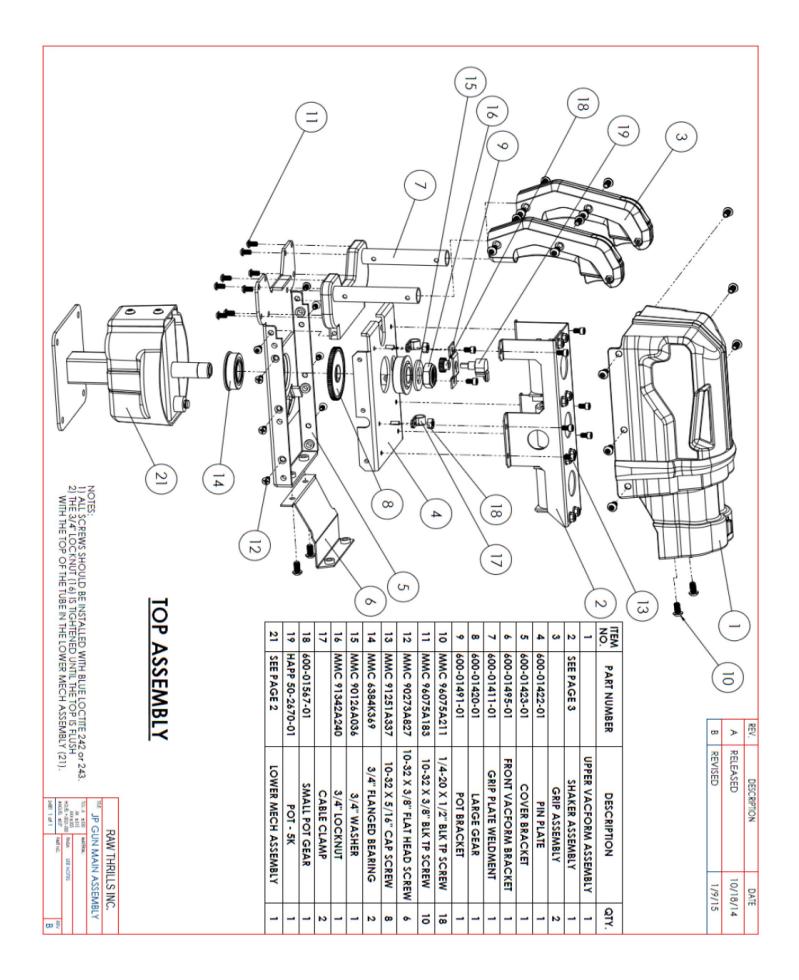

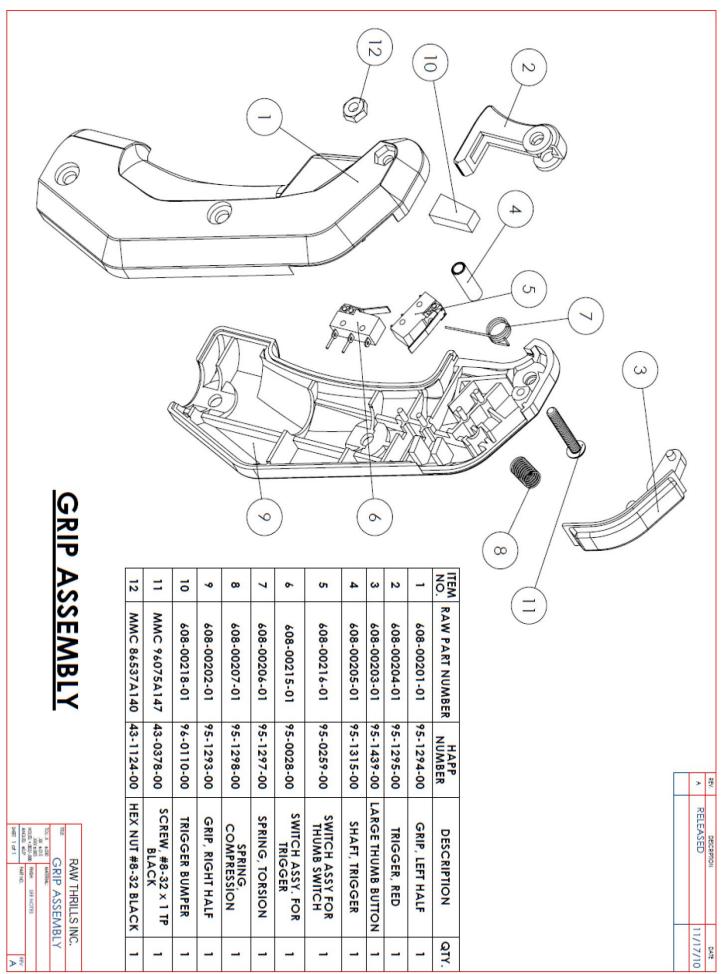

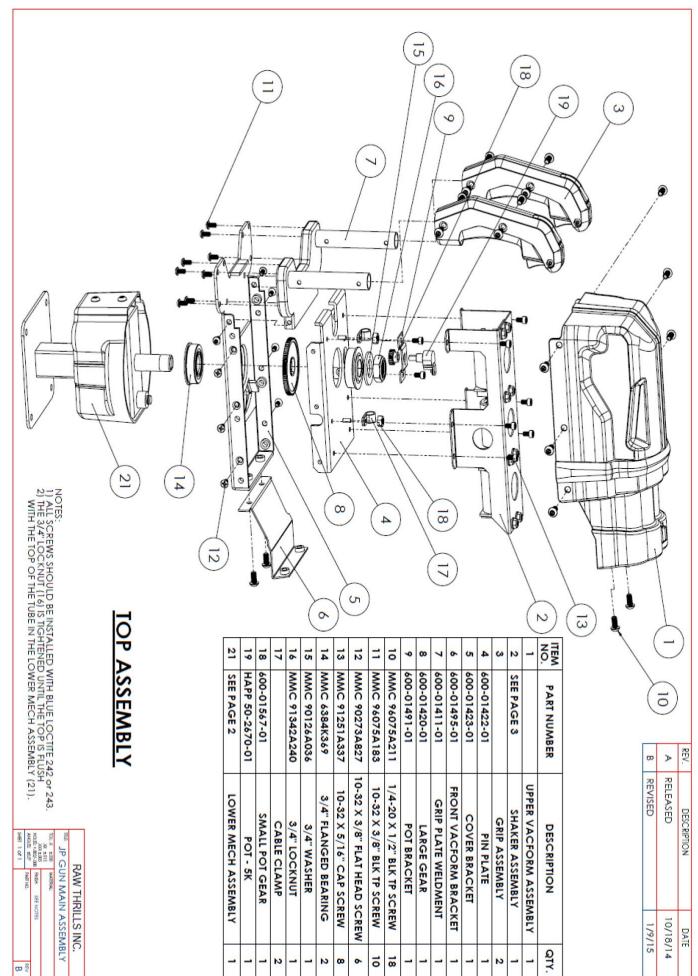



I.C.E. Inc warrants all components in your new Jurassic Park Home Edition machine to be free of defects in materials and workmanship for the period of **ONE YEAR** from purchase date.

I.C.E. Inc shall not be obligated to furnish a warranty request under the following conditions:

- The game is operated commercially.
- Equipment has been subjected to unwarranted stress, abuse or neglect.
- Equipment has been damaged as a result of arbitrary repair/modification.

Products will only be covered under warranty free of charge by obtaining an I.C.E. authorized RMA #. To obtain an RMA # please provide I.C.E. tech support with the game serial # or original I.C.E. invoice # and a detailed description of the failure or fault symptoms.

I.C.E. Inc will assume no liability whatsoever for costs associated with labor or travel time to replace defective parts. All defective warranty covered components will be replaced with new or factory refurbished components equal to OEM specifications.

I.C.E. Inc will cover domestic UPS ground, or comparable shipping costs during the warranty period. International or expedited shipments are available for an additional charge.

ICE distributors are independent, privately owned and operated. In their judgment, they may sell parts and/or accessories other than those manufactured by I.C.E. Inc. We cannot be responsible for the quality, suitability or safety of any non-I.C.E. part or modification (including labor) that is performed by such a distributor.

Innovative Concepts in Entertainment **10123 Main St.**

Clarence, NY 14031

Phone #: (716) - 759 — 0360

Fax #: (716) - 759 - 0884

www.icegame.com